


Configurazione Linksys PAP2

Una volta collegato il dispositivo alla scheda di rete del proprio pc, digitare nella barra degli indirizzi del proprio browser internet il seguente indirizzo IP: 195.168.15.1 come da figura:

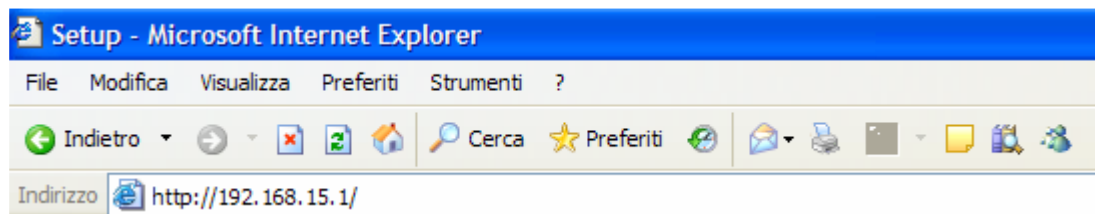

Nel caso non dovesse funzionare, ricordiamo di forzare la propria scheda di rete in questo modo:

START → CONNESSIONI DI RETE → VISUALIZZA CONNESSIONI DI RETE →
CONNESSIONE ALLA RETE LOCALE LAN → PROPRIETA' → Protocollo Internet TCP/IP

A questo punto si aprirà una schermata dove inserire manualmente gli indirizzi IP nel seguente modo:

Indirizzo IP: 192.168.15.2
Subnet Mask: 255.255.255.0
Gateway Predefinito: 192.168.15.1

Alla fine premere su OK e poi di nuovo OK.

Ora il vostro Pc è pronto per collegarsi al dispositivo Linksys, digitando l'IP nella barra degli indirizzi come riportato precedentemente.

Si aprirà così una schermata che vi chiederà di inserire "username" e "password", basterà semplicemente digitare la parola "admin" in entrambi i campi.

A questo punto vi si presenterà la schermata iniziale di configurazione "Basic Settings" da configurare come riportato nella seguente figura:

Setup

Setup

Security

Voice

Applications
& Gaming

Administration

Status

Basic Setup

DDNS

MAC Address Clone

Advanced Routing

Internet Setup

Internet Connection Type

Optional Settings
(required by some ISPs)

Network Setup

Router IP

Network Address
Server Settings (DHCP)

Time Setting

Obtain an IP automatically

Host Name:

Domain Name:

MTU: Enable Disable Size:

Local IP Address: . . .

Subnet Mask: . . .

Local DHCP Server: Enable Disable

Start IP Address:

Number of
Address:

DHCP Address
Range: 192.168.15.100 to 192.168.15.149

Client Lease Time: minutes (0 means one day)

DNS 1: . . .

DNS 2: . . .

DNS 3: . . .

WINS: . . .

Time Zone:

Basic Setup

The Basic Setup screen is where basic configuration is performed. Some ISPs (Internet Service Providers) will require that you enter the DNS information. These settings can be obtained from your ISP. After you have configured these settings, you should set a router password from the *Administration->Management* screen.

Completing the **Internet Setup** section is all that is required to set up for your specific ISP. Please look at the table below to configure the Router for your Internet connection.

[More...](#)

Save Settings

Cancel Changes



Cliccate alla fine su "Save Settings" ed aspettate che la schermata iniziale ricompaia.

Ora potete cliccare sulla voce "Voice" e poi "Line 1" che vi riporterà a questa schermata:

LINKSYS
A Division of Cisco Systems, Inc. Firmware Version: 1.20.00

Broadband Router with 2 Phone Ports RT31P2

Voice | Setup | Security | **Voice** | Applications & Gaming | Administration | Status

System | **Line 1** | Line 2

Subscriber Information

Display Name: (Option)
User ID: (Ex: 9495551212 or jsmith)
Authentication User Name:
Authentication Password:
Registration / Proxy Server:

NAT Traversal Settings

NAT Traversal:
NAT Aware Proxy Address:

Call Forward Settings

Cfwd All Dest: Cfwd Busy Dest:
Cfwd No Ans Dest: Cfwd No Ans Delay:

Speed Dial Settings

Speed Dial 2: Speed Dial 3:
Speed Dial 4: Speed Dial 5:
Speed Dial 6: Speed Dial 7:
Speed Dial 8: Speed Dial 9:

Supplementary Service Settings

Call Waiting: Block Caller ID:

Distinctive Ring Settings

Ring 1 Caller: Ring 2 Caller:
Ring 3 Caller: Ring 4 Caller:
Ring 5 Caller: Ring 6 Caller:
Ring 7 Caller: Ring 8 Caller:

Voice Quality Settings

Voice Quality:

CISCO SYSTEMS

Configuratelo come da figura e poi cliccate sul tasto Save Settings, ora il vostro PAP2 è pronto per l'utilizzo con i servizi VoIP Digitale Italia.